

## USER'S MANUAL

### 4eyes 400W LED COB Blinder



#### Maintenance

1. Please keep the light in dryness and avoiding use in wet place.
2. Using intermittently can be extended the life.
3. Attention to clean the fan and lens usually in order to get the ventilating effects and lighting effects better.
4. Please do not wipe the crust using organic menstruum for avoid to damaged the product.

#### Statement

The product has well capability and intact packing when leave factory, All of the user should comply with above warning item and manual, any misuse cause of the damages are not included in our guarantee, and also can't be responsible for any malfunction & problem owing to ignore the manual. Please forgive that we will not be notice for technical change

#### Attention Item

1. For guarantee the life of product, please do not put it on the wet place and not use it the place over 40 degree.
2. Please don't lay the product on the un-fixable or shakable place.
3. Ask for the professional to maintain the product in order to avoid the danger of get an electric shock.
4. Power supply should not be changed over  $\pm 10\%$  while the light is using, it will be decreased the

- life of lamp if the power is too high, but it will be influenced the luminosity if the power is too low.
5. After power off, if it is needed used again, please cool down over 20 minutes.
6. Please look round the manual for ensure the product can be used normally.

### DMX Channel Summary-1 Channels Mode d001

Channel	Value	Function
CH1	0-255	1# COB dimming, from dark to bright
CH2	0-255	2# COB dimming, from dark to bright
CH3	0-255	3# COB dimming, from dark to bright
CH4	0-255	4# COB dimming, from dark to bright

### DMX Channel Summary-8 Channels Mode A001

Channel	Value	Function
CH1	0-255	1-4# COB total dimming, from dark to bright
CH2	0-255	1# COB dimming, from dark to bright
CH3	0-255	2# COB dimming, from dark to bright
CH4	0-255	3# COB dimming, from dark to bright
CH5	0-255	4# COB dimming, from dark to bright
CH6	0-255	1-4# COB total strobe, 005-255 from slow to fast
CH7	50-100	011-022: Light selection, controlled by CH8
	101-150	Jump effect
	151-200	Gradient effect
	201-250	Transition effects
	251-255	Sound control
CH8	0-255	CH7 Regulation control

## Display Control Instruction

Display	Value	Function
<b>d001</b>	001- 512	DMX512 address code set to 4-channel mode
<b>A001</b>	001- 512	DMX512 address code set -8 channel mode
<b>S-SL</b>	SL/FA	DMX dimming speed setting
		SL: slow dimming; FA: fast dimming
<b>d-Ho</b>	Ho/oF	DMX signal loss processing mode setting:
		Ho: Keeping the last DMX signal status;
		oF: Turn off all LEDs
<b>r255</b>	000 - 255	1# COB dimming, from dark to bright
<b>G255</b>	000 - 255	2# COB dimming, from dark to bright
<b>b255</b>	000 - 255	3# COB dimming, from dark to bright
<b>u255</b>	000 - 255	4# COB dimming, from dark to bright
<b>F255</b>	000 - 255	Above 5 strobe, speed from slow to fast
<b>Cc15</b>	00 - 15	Jump effect setting:
		UP button to select 1#-9# hopping effect
		DOWN key sets the jump speed.
<b>dE15</b>	00 - 15	Gradient effect settings:
		UP button to select 1 # -9 # gradient effect
		DOWN key to set the gradation speed.
<b>CP15</b>	00 - 15	Pulse, from slow to fast.
<b>SU15</b>	00 - 15	Voice control jumps, high sensitivity from low to high.
<b>t000</b>	0-99	The current temperature display (optional) is displayed when not in use: t---

---

# Display Control Instruction

Access control panel functions using the four buttons located directly underneath the LED display on the included wired remote.

BUTTON	FUNCTION
<MENU>	Used to scroll through the current operating mode, as well as back out of the current menu option
<DOWN>	Used to select decreasing advancement in the value
<UP>	Used to select increasing advancement in the value
<ENTER>	Used to select a value and store it to memory



The Control Panel shows the current state of the unit. It is used to select the operating mode, as well as the sub-features. For a detailed layout of the control panel functions, please see the "menu map" section on the following page.

Instructions: Press the function key A cycled out the eight different function effects, digital tube first two digits on behalf of which the current function (see menu). The last two digits represent the functions in which the address code or speed parameters. Press the B or C key to modify the parameter values. Press the D key to confirm.

## Product Introduction

\* Power Supply: AC90--275V, 50--60HZ

- 
- \* Power consumption:400W
  - \* Fixing lamp:LED 4×100W warm white
  - \* DMX-Control-channels:4/8 DMX Channels
  - \* Shuttle:Flash rate:0--10HZ
  - \* Dimmer:0-100% mechanic dimmer
  - \* Long Lifespan LEDs(more than 60,000 hours)

# SHEHDS