



Stage Lighting Equipment Supplier Expert

WELCOME TO JOIN US

USER'S MANUAL

LED Beam Spider 8x10W RGBW Lighting



Maintenance

1. Please keep the light in dryness and avoiding use in wet place.
2. Using intermittently can be extended the life.
3. Attention to clean the fan and lens usually in order to get the ventilating effects and lighting effects better.
4. Please do not wipe the crust using organic menstruum for avoid to damaged the product.

Statement

The product has well capability and intact packing when leave factory, All of the user should comply with above warning item and manual, any misuse cause of the damages are not included in our guarantee, and also can't be responsible for any malfunction & problem owing to ignore the manual. Please forgive that we will not be notice for technical change

Attention Item

1. For guarantee the life of product, please do not put it on the wet place and not use it the place over 40 degree.
2. Please don't lay the product on the un-fixable or shakable place.

3. Ask for the professional to maintain the product in order to avoid the danger of get an electric shock.
4. Power supply should not be changed over $\pm 10\%$ while the light is using, it will be decreased the life of lamp if the power is too high, but it will be influenced the luminosity if the power is too low.
5. After power off, if it is need used again, please cool down over 20 minutes.
6. Please look round the manual for ensure the product can be used normally.

DMX Channel Summary-14 Channels Mode

channel	Channel value	function
CH1	M1 moving	0-0-255 forward-reverse setting
CH2	M2 moving	0-255 forward-reverse setting
CH3	M1-2 speed	M1-2 speed setting
CH4	lighting	0-255 lighting setting
CH5	strobe	0-255 strobe, slowly-fast
CH6	BAR1	BAR1 colors chose
CH7	BAR2	BAR2 colors chose
CH8	BAR3	BAR3 colors chose
CH9	BAR4	BAR4 colors chose
CH10	BAR5	BAR5 colors chose
CH11	BAR6	BAR6 colors chose
CH12	BAR7	BAR7 colors chose
CH13	BAR8	BAR8 colors chose
CH14	Rest	150-200 rest

DMX Channel Summary-16 Channels Mode

channel	Channel value	function
CH1	M1 moving	0-255 forward-reverse setting
CH2	M1 moving	0-255 M1 speed setting
CH3	lighting	0-255 lighting setting
CH4	strobe	0-255 strobe, slowly-fast
CH5	R1	0-255 red setting
CH6	G1	0-255 green setting
CH7	B1	0-255 blue setting
CH8	W1	0-255 white setting
CH9	M2 moving	0-255 forward-reverse setting
CH10	M2 moving	0-255 M2 speed setting
CH12	lighting	0-255 lighting setting
CH11	strobe	0-255 strobe, slowly-fast
CH13	R2	0-255 red setting

CH14	G2	0-255 green setting
CH15	B2	0-255 blue setting
CH16	W2	0-255 white setting

DMX Channel Summary-18 Channels Mode

channel	Channel value	function
CH1	0-10	**
	11-120	Effect 1
	121-243	Effect 2
	245-255	Sound
CH2	Speed setting	Speed setting
CH3	0-10	**
	11-127	Colors change
	128-160	Colors change1
	161-200	Colors change2
	201-255	Colors change3
CH4	Speed setting	3ch-speed setting
CH5	M1 moving	0-0-255 forward-reverse setting
CH6	M2 moving	0-255 forward-reverse setting
CH7	M1-2 speed	M1-2 speed setting
CH8	lighting	0-255 lighting setting
CH9	strobe	0-255 strobe, slowly-fast
CH10	R1	0-255 red setting
CH11	G1	0-255 green setting
CH12	B1	0-255 blue setting
CH13	W1	0-255 white setting
CH14	R2	0-255 red setting
CH15	G2	0-255 green setting
CH16	B2	0-255 blue setting
CH17	W2	0-255 white setting
CH18	Rest	150-200 rest

DMX Channel Summary-42 Channels Mode

channel	Channel value	function
CH1	0-10	**
	11-120	Effect 1
	121-243	Effect 2
	245-255	Sound

CH2	Speed setting	Speed setting
	0-10	**
CH3	11-127	Colors change
	128-160	Colors change1
	161-200	Colors change2
	201-255	Colors change3
CH4	Speed setting	3ch-speed setting
CH5	M1 moving	0-0-255 forward-reverse setting
CH6	M2 moving	0-255 forward-reverse setting
CH7	M1-2 speed	M1-2 speed setting
CH8	lighting	0-255 lighting setting
CH9	strobe	0-255 strobe, slowly-fast
CH10	R1	0-255 red setting
CH11	G1	0-255 green setting
CH12	B1	0-255 blue setting
CH13	W1	0-255 white setting
CH14	R2	0-255 red setting
CH15	G2	0-255 green setting
....
CH40	B8	0-255 blue setting
CH41	W8	0-255 white setting
CH42	Rest	150-200 rest


Display Control Instruction

Main menu	Sub menu	Function
d001	001-512	512 DMX
Chxx	16	16CH
	18	18CH
	42	42CH
	14	14CH
Mode	Dmx	DMX
	Fast	Fast-auto
	Slow	Slow-auto
	Soud	sound
Sens	0-99	Sound setting
Til1	OFF	M1-OFF
	ON	M1-ON
Til2	OFF	M2-OFF
	ON	M2-ON
rdoF	rdoF	Show-OFF
	rdon	Show-ON

CdoF	CdoF	Show -OFF
	Cdon	Show-ONN
Deft	YES	Restore setting
REST	YES	Rest

Display Control Instruction

Welcome to use our light. The light uses energy-saving LED, long Product life, shockproof, dustproof, DMX receiver and self-running feature, which can produce a variety of vivid lighting effects, easy to operate, suitable for all types of entertainment decoration, architectural lighting industry.

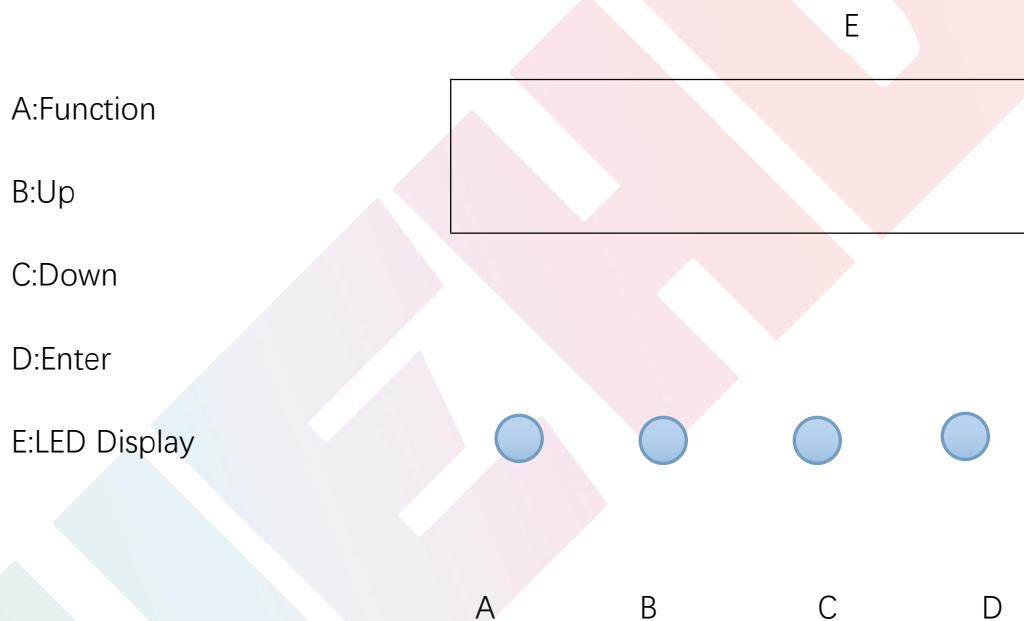

Instructions: Press the function key A cycled out the eight different function effects, digital tube first two digits on behalf of which the current function (see menu). The last two digits represent the functions in which the address code or speed parameters. Press the B or C key to modify the parameter values. Press the D key to confirm.

Product Introduction

- * Power Supply: AC90--275V, 50--60HZ
- * Power consumption: 80W
- * Fixing lamp: LED 8×10W RGBW

-
- * DMX-Control-channels:7/15 DMX Channels
 - * Shuttle:Flash rate:0--10HZ
 - * Dimmer:0-100% mechanic dimmer
 - * Long Lifespan LEDs(more than 60,000 hours)