

USER'S MANUAL

LED Beam Spider 8x10W RGBW Lighting



Maintenance

1. Please keep the light in dryness and avoiding use in wet place.
2. Using intermittently can be extended the life.
3. Attention to clean the fan and lens usually in order to get the ventilating effects and lighting effects better.
4. Please do not wipe the crust using organic menstruum for avoid to damaged the product.

Statement

The product has well capability and intact packing when leave factory, All of the user should comply with above warning item and manual, any misuse cause of the damages are not included in our guarantee, and also can't be responsible for any malfunction & problem owing to ignore the manual.

Please forgive that we will not be notice for technical change

Attention Item

1. For guarantee the life of product, please do not put it on the wet place and not use it the place over 40 degree.
2. Please don't lay the product on the un-fixable or shakable place.
3. Ask for the professional to maintain the product in order to avoid the danger of get an electric shock.
4. Power supply should not be changed over +&-10% while the light is using, it will be decreased the life of lamp if the power is too high, but it will be influenced the luminosity if the power is too low.
5. After power off, if it is need used again, please cool down over 20 minuter.
6. Please look round the manual for ensure the product can be used normally.

Display Control Instruction

Welcome to use our light. The light uses energy-saving LED, long Product life, shockproof, dustproof, DMX receiver and self-running feature, which can produce a variety of vivid lighting effects, easy to operate, suitable for all types of entertainment decoration, architectural lighting industry.

 
A:Function

B:Up

C:Down

D:Enter

E:LED Display



A



B



C



D

Instructions: Press the function key A cycled out the eight different function effects, digital tube first two digits on behalf of which the current function (see menu). The last two digits represent the functions in which the address code or speed parameters. Press the B or C key to modify the parameter values. Press the D key to confirm.

Product Introduction

- * Power Supply: AC90--275V, 50--60HZ
- * Power consumption: 80W
- * Fixing lamp: LED 8×10W RGBW
- * DMX-Control-channels: 10/36 DMX Channels
- * Shuttle: Flash rate: 0--10HZ
- * Dimmer: 0-100% mechanic dimmer
- * Long Lifespan LEDs (more than 60,000 hours)

Display Control Instruction

Main menu	Sub menu		Function
<i>ADD 1</i>	<i>00 1-5 12</i>		512 DMX
<i>chnd</i>	<i>10</i>		10CH
	<i>36</i>		36CH
<i>SLnd</i>	<i>nRSt</i>		nest
	<i>SL 1</i>		Slave1
	<i>SL 2</i>		Slave2
<i>AUTO</i>	<i>AtD 1-25</i>		Auto run mode
	<i>SPEd</i>		Auto run speed
<i>SoEn</i>	<i>on</i>	<i>oFF</i>	Sound control mode ON/OFF
<i>SoUd</i>	<i>1- 100</i>		Sound control sensitivity
<i>tESt</i>	<i>YES</i>		Test
<i>dISP</i>	<i>YES</i>	<i>no</i>	Display upside down
<i>LEd</i>	<i>YES</i>	<i>no</i>	LED display Backlight ON/OFF
<i>1t 1L</i>	<i>YES</i>	<i>no</i>	M1-motor reverse
<i>2t 1L</i>	<i>YES</i>	<i>no</i>	M2-motor reverse
<i>rESt</i>	<i>YES</i>		Rest

DMX Channel 10 Channels Mode

CH	Value	Function
CH1	0-255	Tilt 1# moving
CH2	0-255	Tilt 2# moving
CH3	0-255	Total dimming
CH4	0-255	Strobe
CH5	0-255	Red color
CH6	0-255	Green color
CH7	0-255	Blue color
CH8	0-255	White color

36 Channels Mode

CH	Value	Function	
CH1	0-255	Tilt 1# moving	
CH2	0-255	Tilt 2# moving	
CH3	0-255	Total dimming	
CH4	0-255	Strobe	
CH5	0-255	1# LED	Red color
CH6	0-255		Green color
CH7	0-255		Blue color
CH8	0-255		White color

CH9	0-16	Auto Color mode 1	CH9	0-255	2# LED	Red color
	17-27	Auto Color mode	CH10	0-255		Green color
	28-37	Auto Color mode	CH11	0-255		Blue color
	38-47	Auto Color mode	CH12	0-255		White color
	48-57	Auto Color mode	CH13	0-255	3# LED	Red color
	57-67	Auto Color mode	CH14	0-255		Green color
	68-77	Auto Color mode	CH15	0-255		Blue color
	78-87	Auto Color mode	CH16	0-255		White color
	88-97	Auto Color mode	CH17	0-255	4# LED	Red color
	98-107	Auto Color mode	CH18	0-255		Green color
	108-117	Auto Color mode	CH19	0-255		Blue color
	118-127	Auto Color mode	CH20	0-255		White color
	128-136	Auto Color mode	CH21	0-255	5# LED	Red color
	137-145	Auto Color mode	CH22	0-255		Green color
	146-154	Auto Color mode	CH23	0-255		Blue color
	155-163	Auto Color mode	CH24	0-255		White color
	164-172	Auto Color mode	CH25	0-255	6# LED	Red color
	173-181	Auto Color mode	CH26	0-255		Green color
	182-190	Auto Color mode	CH27	0-255		Blue color
	191-199	Auto Color mode	CH28	0-255		White color
	200-208	Auto Color mode	CH29	0-255	7# LED	Red color
	209-217	Auto Color mode	CH30	0-255		Green color
	218-226	Auto Color mode	CH31	0-255		Blue color
	227-235	Auto Color mode	CH32	0-255		White color
	236-244	Auto Color mode	CH33	0-255	8# LED	Red color
	245-253	Auto Color mode	CH34	0-255		Green color
	254-255	Sound control	CH35	0-255		Blue color
			CH36	0-255		White color
CH10	0-255	Auto mode speed adjustment				